





## FRITZ!Box 6690 Wi-Fi 6



### Changing Wi-Fi name and password

- Enter the address in the internet browser <https://fritz.box>
- Enter the password shown **on the label** at the bottom of the modem, FRITZ!Box password and click the button „Log in“.

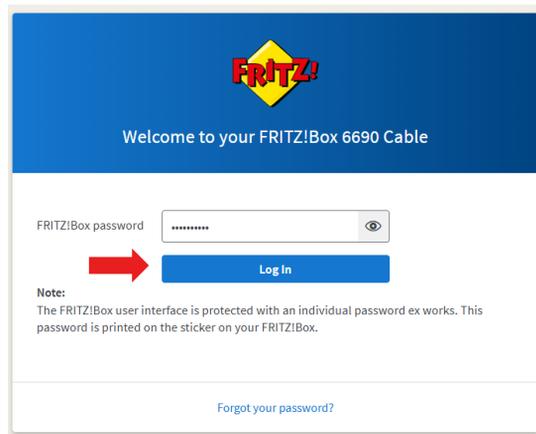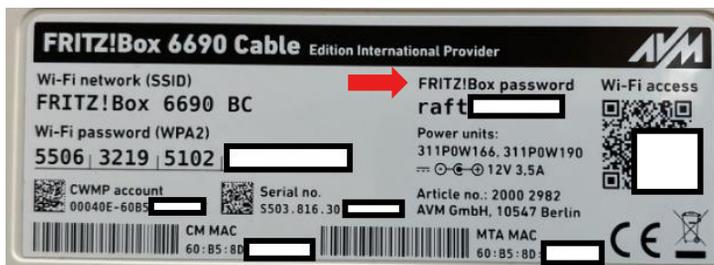

- Modem administration does not support the CZ language.

### Name for 2.4GHz and 5GHz

- It broadcasts dual 2.4 and 5 GHz WiFi networks, by default under the same name and password (Wi-Fi 6 Standard) and supports WPA3.
- 2,4 GHz (IEEE 802.11b/g/n/ax) 4x4 MIMO
- 5 GHz (IEEE 802.11n/ac/ax) 4x4 MIMO

- After logging in, the initial screen will appear.

- To change the Wi-Fi name or password settings, click the **Wi-Fi** option in the left column.
- Then we select the option **Wi-Fi Network**.

- Here, in the **Name of the Wi-Fi network** option, we can change the Wi-Fi name.
- And in the **Wi-Fi network key** option, we change the Wi-Fi password.