

LTE Modem Huawei B2338 - 168 - Wi-Fi settings



- We set Wi-Fi in the modem interface.
- We recommend setting up Wi-Fi using a connected computer with a LAN cable.
- We will open a web browser for the settings. (Google Chrome is recommended)
- Open a web browser and enter: 192.168.1.1



The link will redirect you to the router's login page.





Vítejte v konfiguračním rozhraní vašeho mode Zadejte své uživatelské jméno a heslo, které najdete v instalační příručce nebo na štítla n Uživatelské jméno Heslo

Copyright © Huawei Technologies Co., Ltd. 2016. Všechna práva vyhrazena. | Ochrana soukromých údajů | Poznámka o otevřeném zdr

• Enter the information from the modem label.










This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, Including interference that may cause undesired operation.

INPUT: 56V === 0.536A

MADE IN CHINA




- If it asks us for a new password, we choose any new one, or we skip it.
- On the home page, select Wi-Fi in the top right.

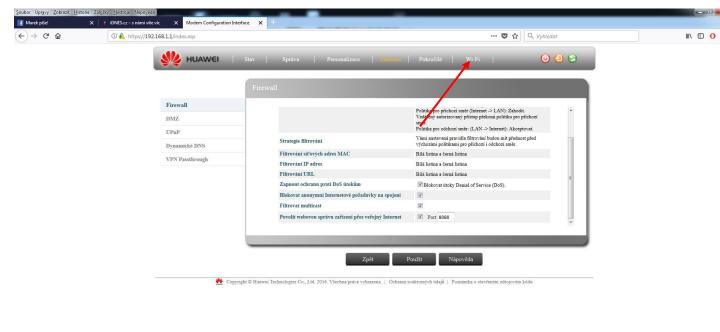




• We then change the required values as necessary.

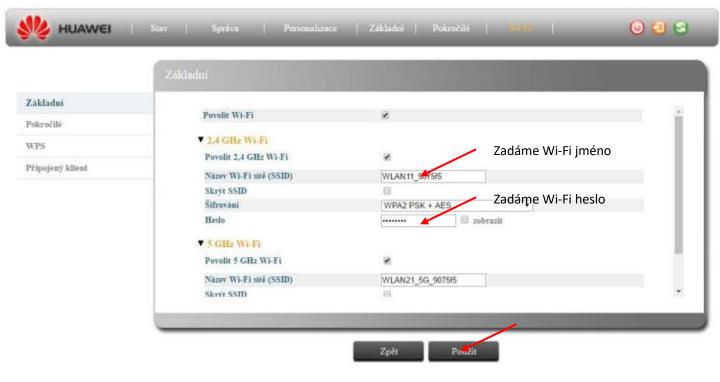



How to set the Wi-Fi channels:

• Wi-Fi channels can be set up in the Wi-Fi – Basic – Advanced section.

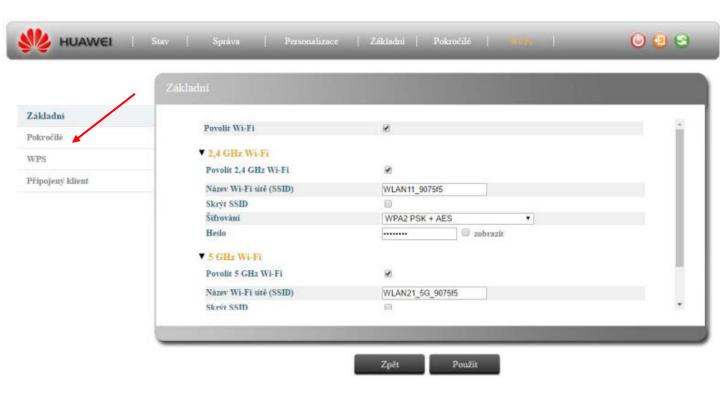

We then change the Wi-Fi settings as needed.



We will return all the settings to their original state by factory settings.