 
 


The Wi-Fi indicator is off

- If the LED for Wi-Fi is not visible and does not light, it means that the problem will be in the device.
- The fastest proof is a factory reset.
- Hold the reset button for at least 10 seconds and let it load.

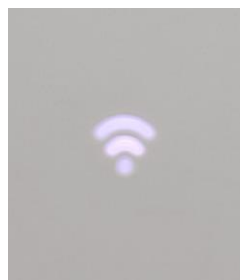

- In case of malfunction, we recommend visiting our branch, as it is a defect in the router.

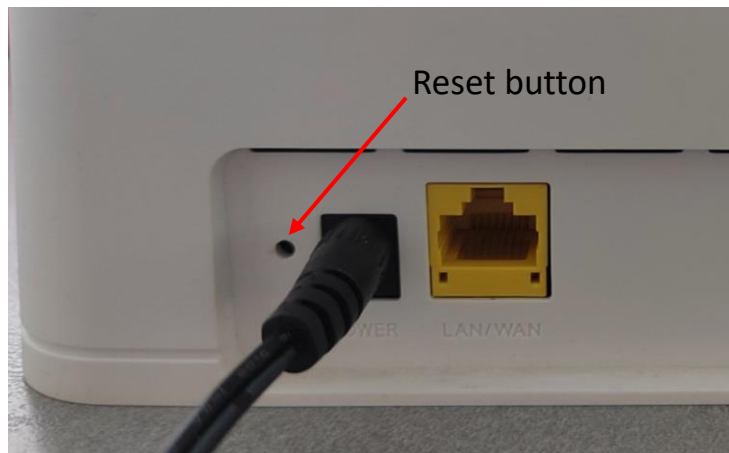

- A mechanical defect of this type cannot be repaired remotely.
- An overview of available branches can be found at www.Vodafone.cz.