



Vodafone GigaCube 5G gen.2 (ZTE MC888 Ultra)



Change Wi-Fi channel

- Enter the address in your internet browser <http://giga.cube> .
 - In the password field, enter the one indicated on the sticker in the lower part of the modem next to the inscription **Web UI Password** and click on the "Log in" button.
-
- After logging in, there will be a **Wi-Fi** option in the middle part of the screen under "My router", click on **Settings** here.



- In the top menu, select **Advanced settings**.



- At the bottom of the screen, we will see the options **Advanced 2.4 GHz settings** and **Advanced 5 GHz settings**, where in the **Frequency (channel)** tab we set the channel on which we want to broadcast..
- Confirm the changes by pressing the **Apply** button.

2.4GHz Advanced Settings

Network Mode	<input type="text" value="802.11 b/g/n/ax"/>
Channel Bandwidth	<input type="text" value="20MHz/40MHz"/>
Frequency (Channel)	<input type="text" value="Auto"/>

5GHz Advanced Settings

Network Mode	<input type="text" value="802.11 a/n/ac/ax"/>
Channel Bandwidth	<input type="text" value="20MHz/40MHz/80MHz/160MHz"/>
Frequency (Channel)	<input type="text" value="Auto"/>

Apply