



Login to the ZTE modem interface

- We log in to the ZTE MF 255 V modem in the same way as to modems from other brands.
- But first we need to be logged in to the Wi-Fi modem.
- We'll show you how to do it in this guide.



We click on the available connections on our computer and find the Wi-Fi name of the modem according to the label on the modem.

- We can find the Wi-Fi login information from the bottom of the label.






- We open any browser (in which we search for websites) and enter the link to the page 192.168.0.1

192.168.0.1

In the upper half of the Google window that is used, we enter this address or click on the address in the top line.

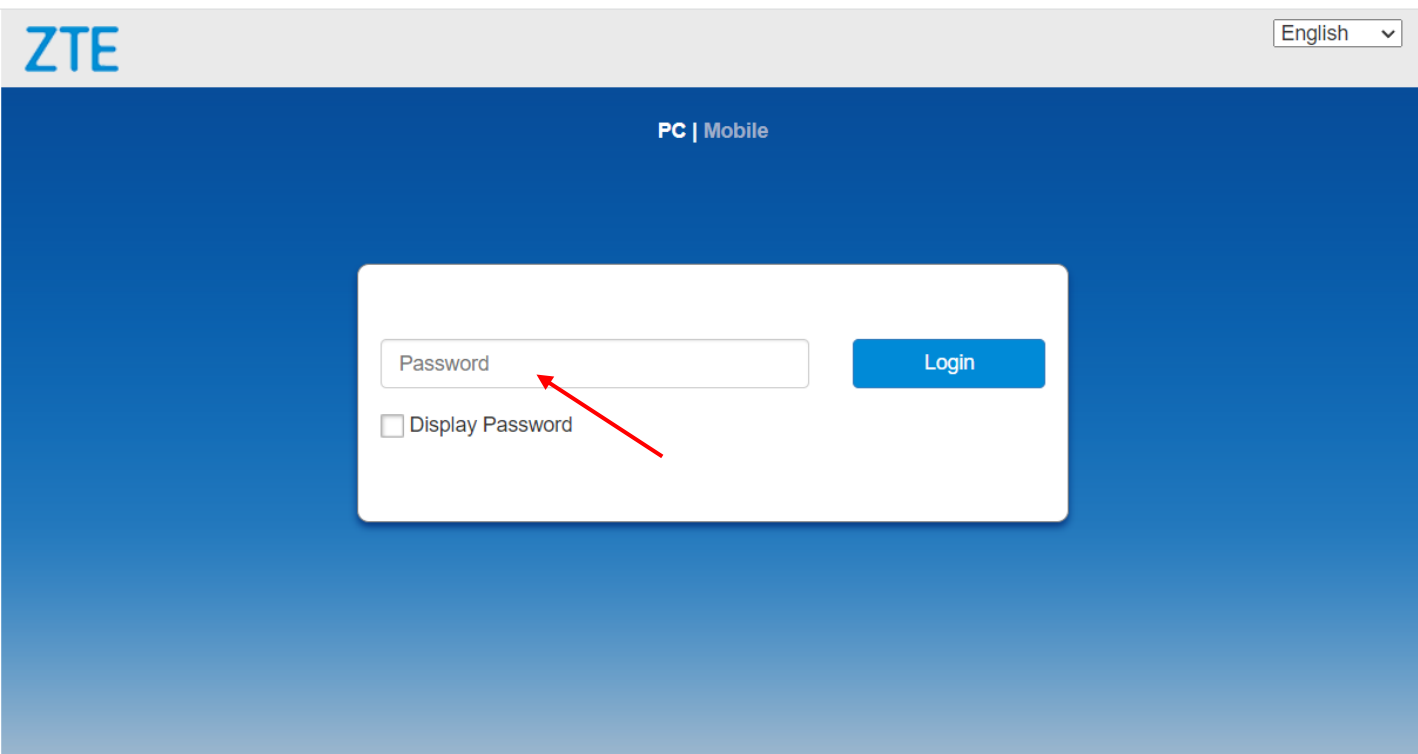

- After displaying the initial page of ZTE, we enter the password from the modem label.



Password to login to the interface.



PC | Mobile

Current Mode: Wireless Broadband Mode [Change](#)

1 Access device

0

1

Connected devices

Connection type and operator information

2 My router

LTE

[Settings](#)

Wi-Fi

[Settings](#)

WiFi settings

3 Net surfing

00:03:34

0b/s ↓

0b/s ↑

Connection information

Statistics



Used

Not set, click Settings

Status Information

SIM information

SIM Card Number	---
IMEI	865979031027674
IMSI	230030150357325
Wi-Fi Coverage	Long Wi-Fi Coverage
Signal Strength	-78 dBm

[Detail Information](#)