

 
Wi-Fi settings on ZTE MF255V

- We log in to the ZTE MF 255 modem in the same way as we log in to modems from other brands.
- But first we need to be logged in to the Wi-Fi modem.
- We'll show you how to do it in this guide.



We click on the available connections on our computer and according to the label on the modem we find the Wi-Fi name of the modem.

- The Wi-Fi login data can be found at the bottom of the label.

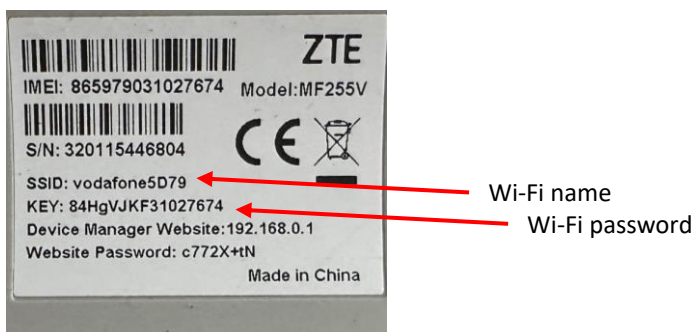




- We open any browser (in which we search for websites) and enter the link to the page 192.168.0.1

192.168.0.1

 
In the upper half of the Google window that is used, we enter this address or click on the address in the top line.

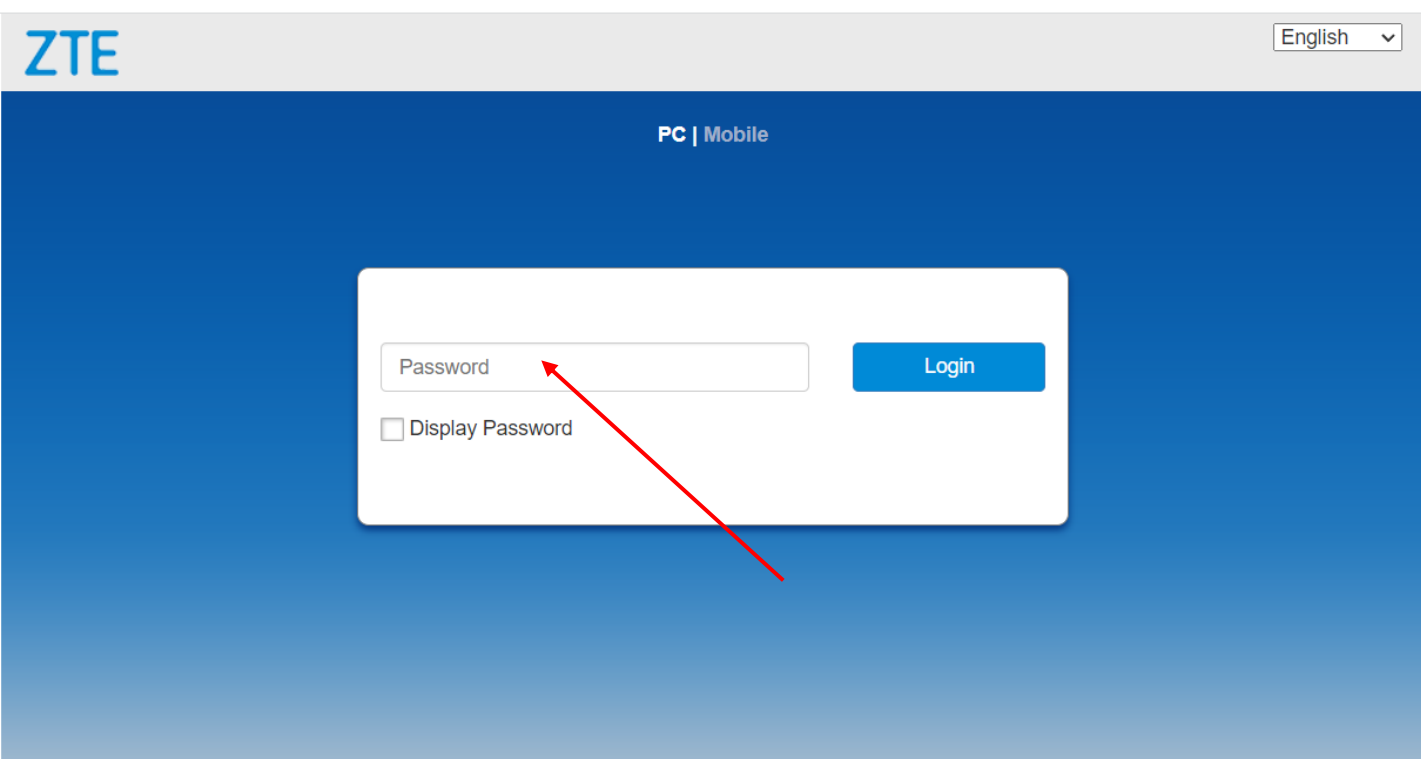

- After displaying the initial page of ZTE, we enter the password from the modem label.



 Password to login to the interface.

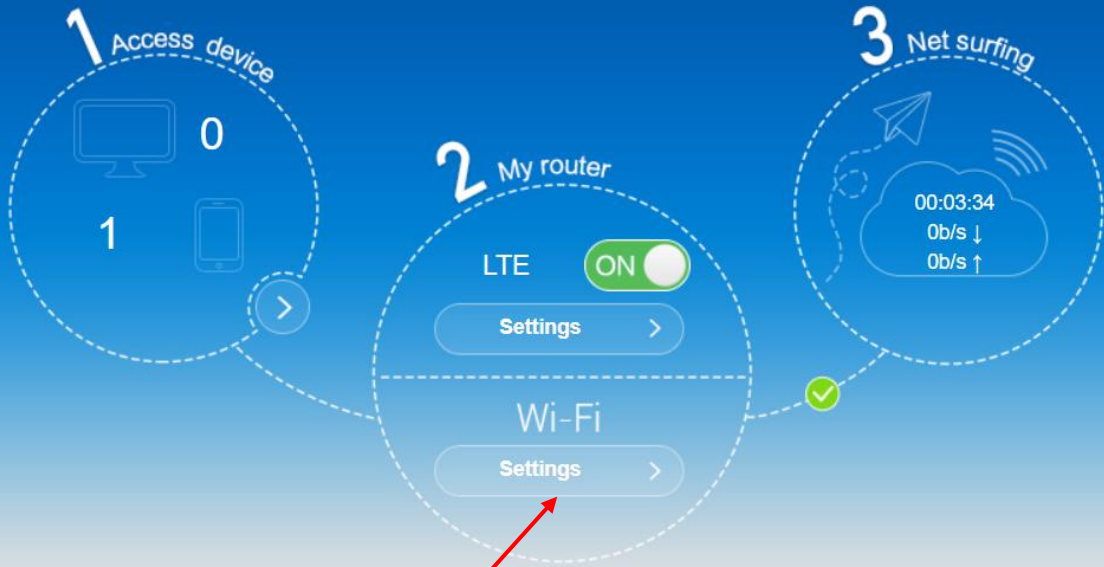

Statistics

Nastavení Wi-Fi

Used

Not set,
click Settings [>](#)

Status Information

SIM Card Number	---
IMEI	865979031027674
IMSI	230030150357325
Wi-Fi Coverage	Long Wi-Fi Coverage
Signal Strength	-78 dBm

[Detail Information](#) [>](#)

- We click on the settings and it redirects us to where we need.



Wi-Fi Settings

Set up wireless hotspot so that your mobile phone or laptop could access network via it



Wi-Fi Switch Enable Disable
Multi SSID Switch Enable Disable

Apply

Main SSID

Guest SSID

WPS

Advanced Settings

Network Name(SSID) *

Vodafone

Broadcast SSID

We enter the name we want for Wi-Fi.

All the wireless client device is completely isolated

Security Mode

WPA2(AES)-PSK

Password *

.....

Enter the required encryption.

Display Password

Password Strength



Middle

We enter the password we want for Wi-Fi.

Max Station Number

32

Apply

And we will save via the button apply.



- When we make a mistake or the password is not saved correctly, we have the option to connect the modem to the PC using a LAN cable.
- Here we do not need to use a Wi-Fi password and proceed in the same way.
- Edit the password and save it.
- If we do not have the possibility to use the LAN cable and PC, it is necessary to perform a reset to the factory settings.
- There is a reset button on the back of the modem, hold it with your finger or a suitable tool for at least 15 seconds.
- Then, after loading, we will set up Wi-Fi again.
- There is only 2.4 Ghz band on the ZTE MF255v.