




ZyXEL EE5301-00

Change of Wi-Fi channels

- Enter the address into the internet browser 192.168.1.1 .
- Enter admin as the username. Then enter the password that is written on the sticker on the bottom of the modem next to "Login Password".



- In the upper right corner, click the menu button, click on "Network settings" and select "Wireless".

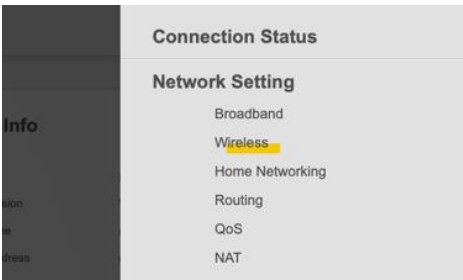

- We will now select the "Band" option (2.4GHz or 5GHz).
- Depending on the set band, we can now change the channel on which the given band will broadcast in the "Channel" tab.

