



Factory reset of the set-top box via the menu




On the remote control, press the **"Menu"** button (House), navigate to the **"Settings"** item (Gear in the upper right corner). Confirm with the **"OK"** button..

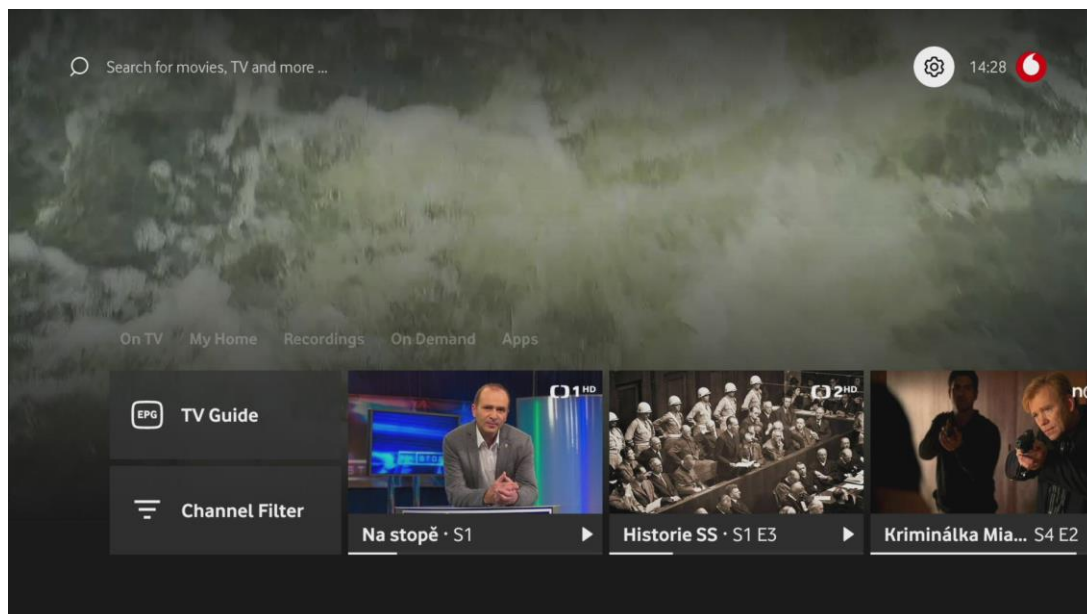


Navigate with the ↓ arrow to **"System Settings"** and confirm **"OK"**.

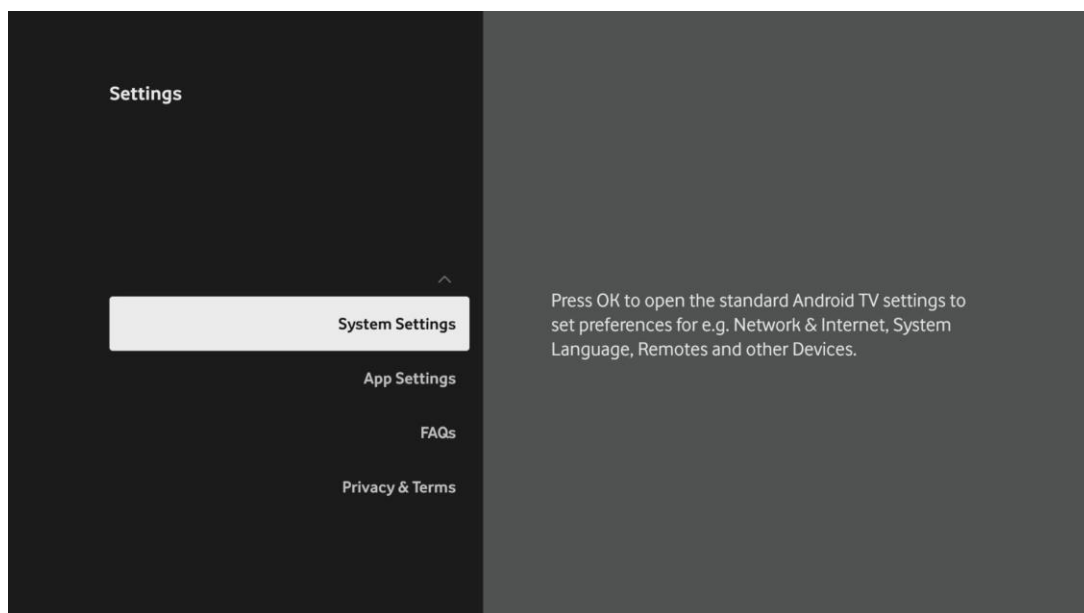


Then use the arrow ↓ to move to the "**Device Preferences**" field and confirm with "**OK**".

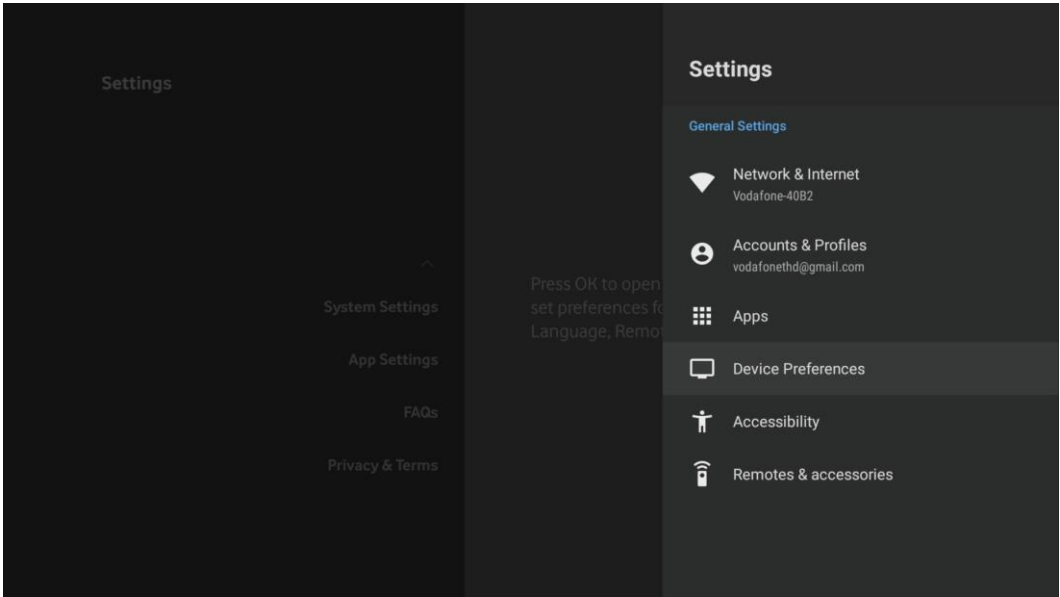


Select "**About**" and confirm with "**OK**".

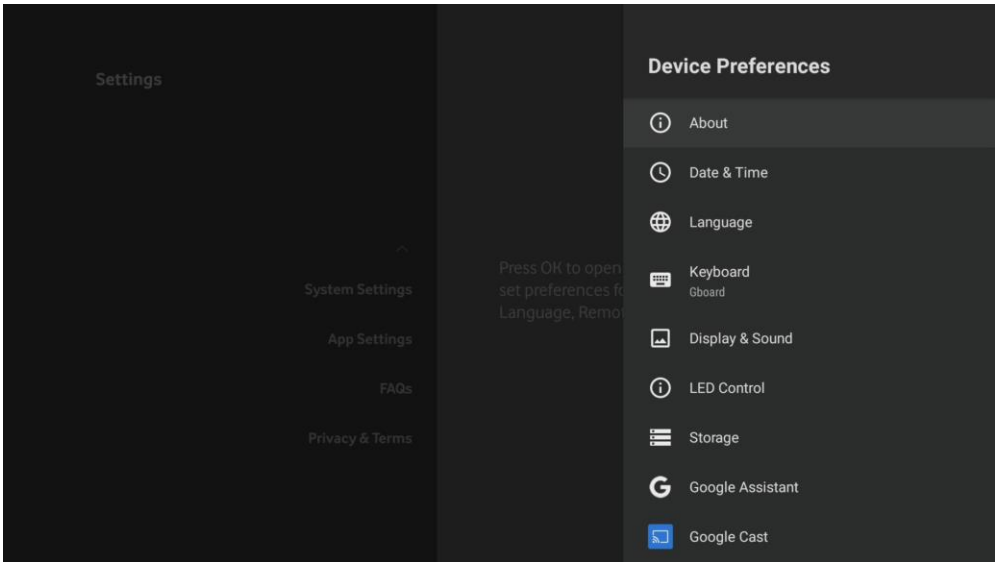

Go to "**Factory reset**" and confirm "**OK**".

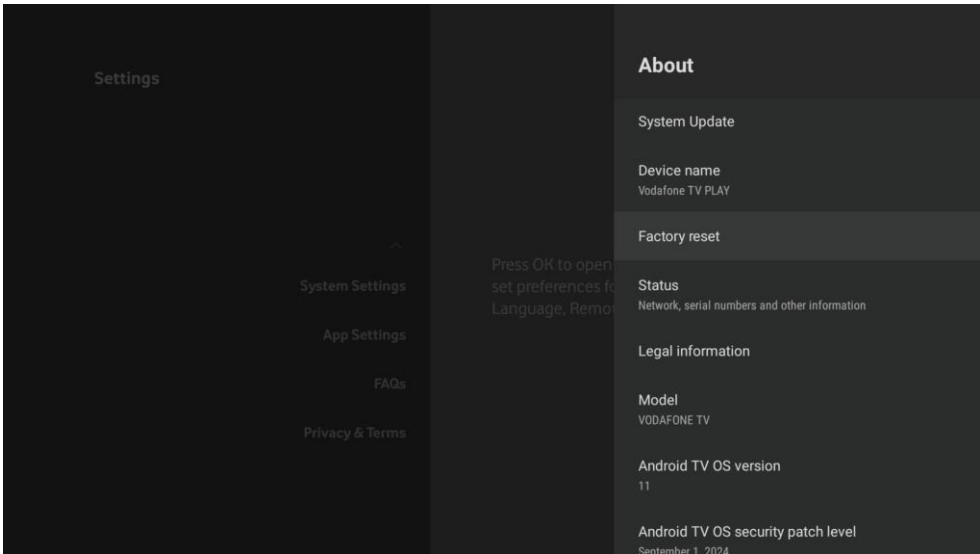

Select "**Factory reset**" and confirm with "**OK**".

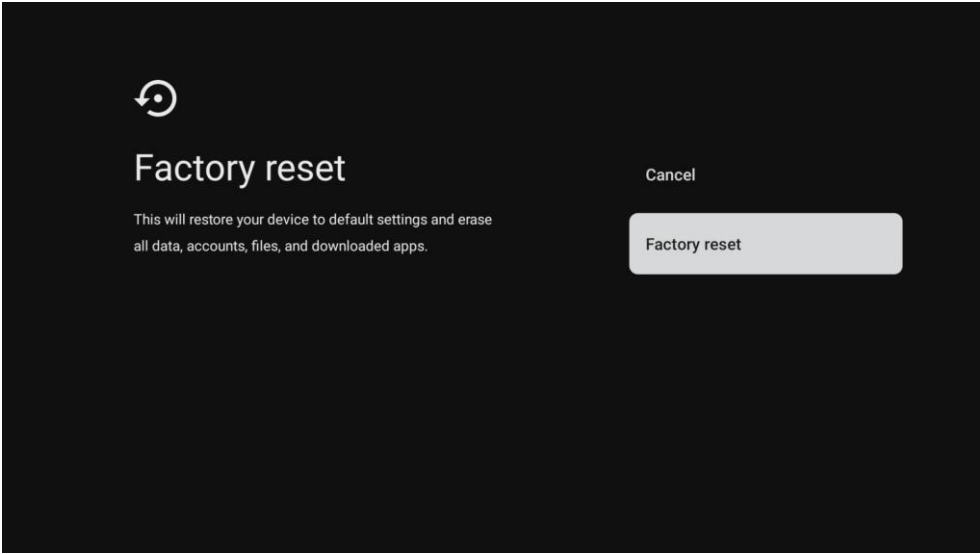

Finally, select "**Erase everything**" and confirm "**OK**".

