


Factory setting of the set-top box via the menu




Press the **"Menu"** button on the remote control (House) and navigate first to the **left** and then **down** to the **"Settings"** icon and confirm with the **"OK"**.,




Navigate with the **arrow ↓** to **"TV box Settings"**.,

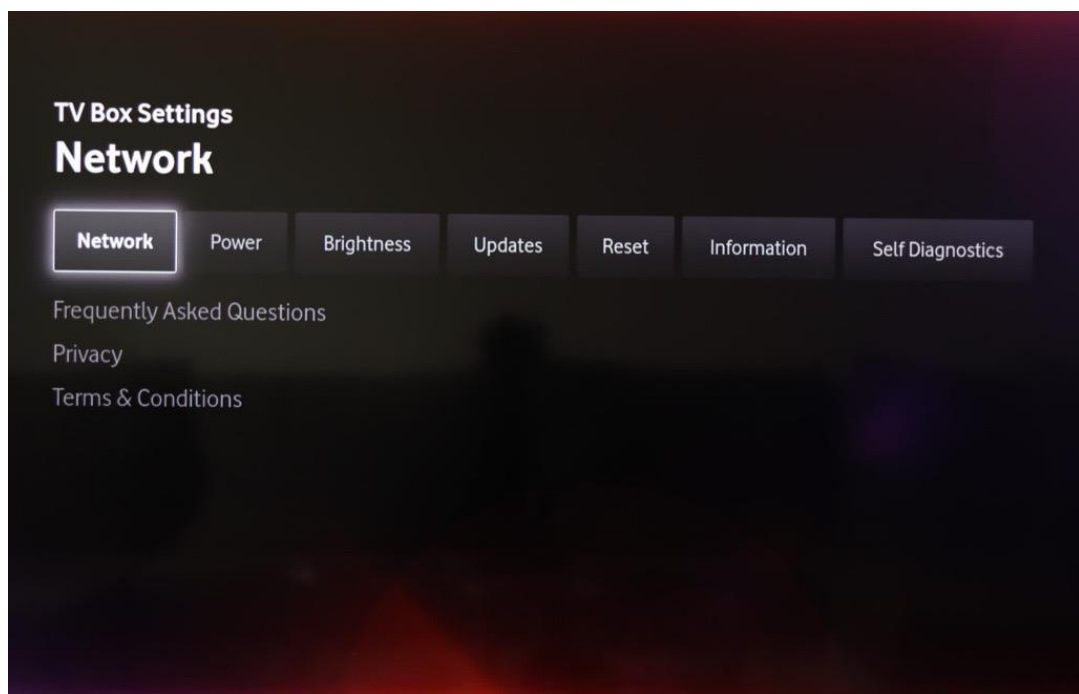


Then we move with the arrow → to the field "Reset,,.

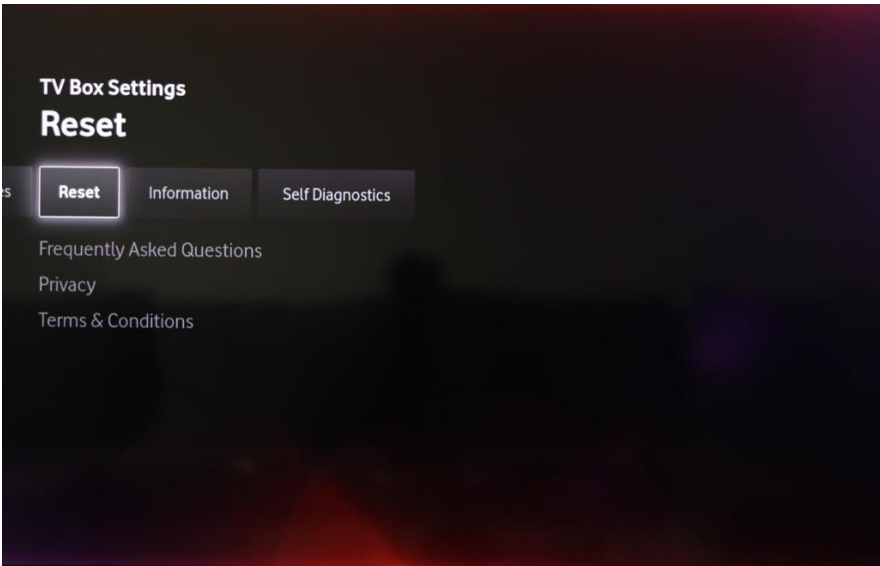

Choose "Yes" and confirm with "OK,,.

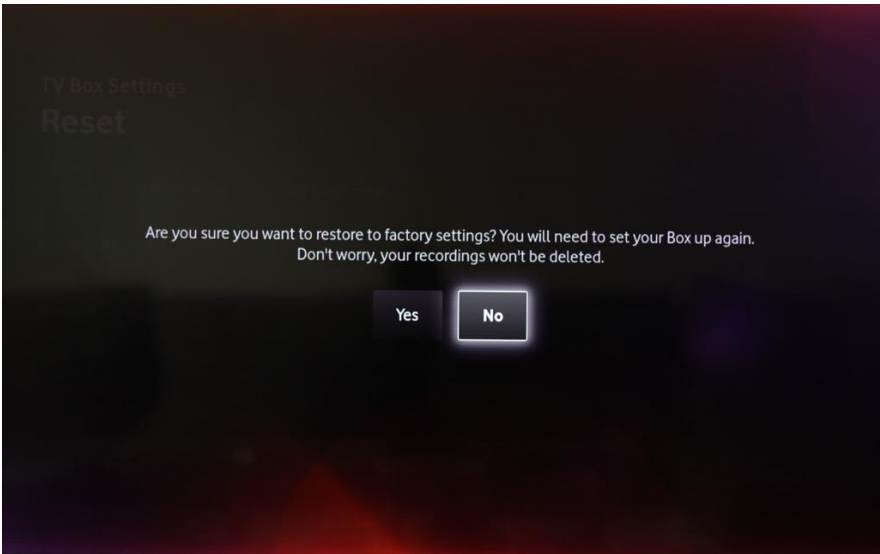

Enter the PIN (the default is 1234).

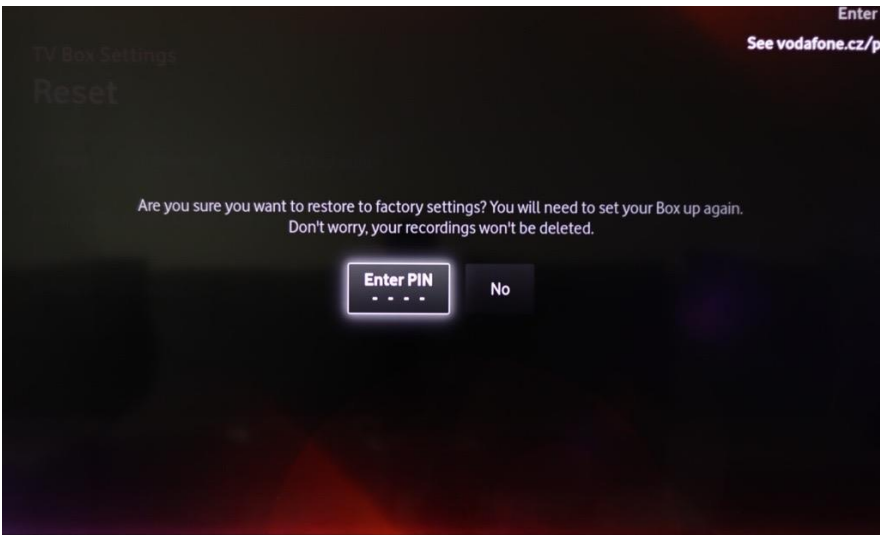

After entering the **PIN**, the set-top box is switched off and on again almost immediately.

Then just go through the basic set-top box settings. (Just press the "**OK**" button **on each screen**).

If the channels search stop at 80%, restart the set-top box, go through the settings again, and then the program search process should complete to 100%.