



Vodafone GigaCube 5G gen.2 (ZTE MC888 Ultra)




Nastavení IPv6/IPv4

- Do internetového prohlížeče zadáme adresu <http://giga.cube>.
 - Do kolonky heslo zadáme to, které je uvedeno na samolepce v dolní části modemu vedle nápisu **Web UI Password** a klikněte na tlačítko **Přihlásit se**.
-
- Po přihlášení bude v prostřední části obrazovky **Můj směrovač**.
 - Je třeba přepnout hodnotu u 4G z **ON** na **OFF**.



- Následně klikneme na **Nastavení** pod 4G zobrazením.
- Poté klikněte na šipku u **APN**.

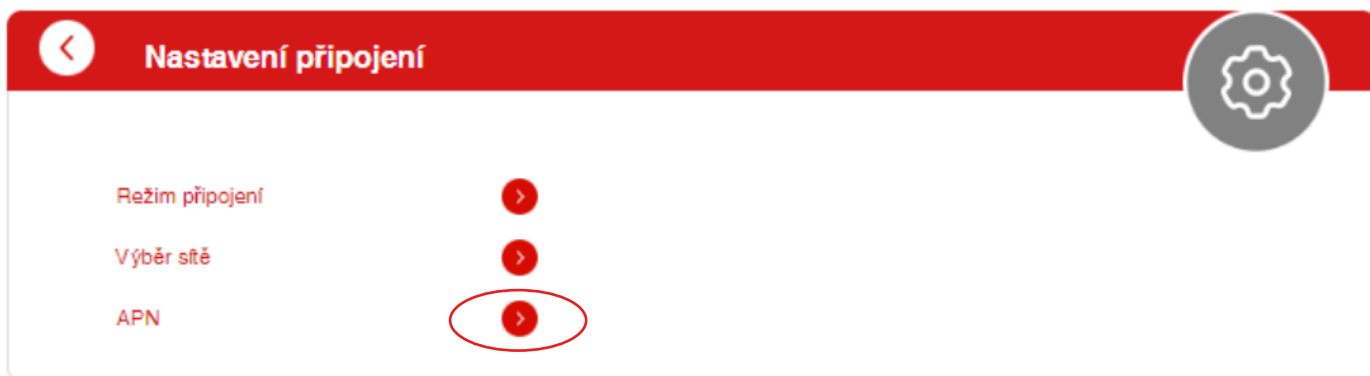


- Režim nastavíme manuálně.



The screenshot shows the 'APN' settings screen. At the top, there is a red header bar with a back arrow and the title 'APN'. On the right side of the header is a gear icon. Below the header, the 'Aktuální APN' (Current APN) is set to 'internet'. Under the 'Režim' (Mode) section, there are two radio buttons: 'Automaticky' (Automatic) and 'Manuálně' (Manual). The 'Manuálně' option is selected and circled in red.

- U Typu PDP rozklikneme výběr a zvolíme požadovanou variantu jestli **IPv4**, **IPv6** či **IPv4v6** (což je dual stack) a klikneme na **Použít**.

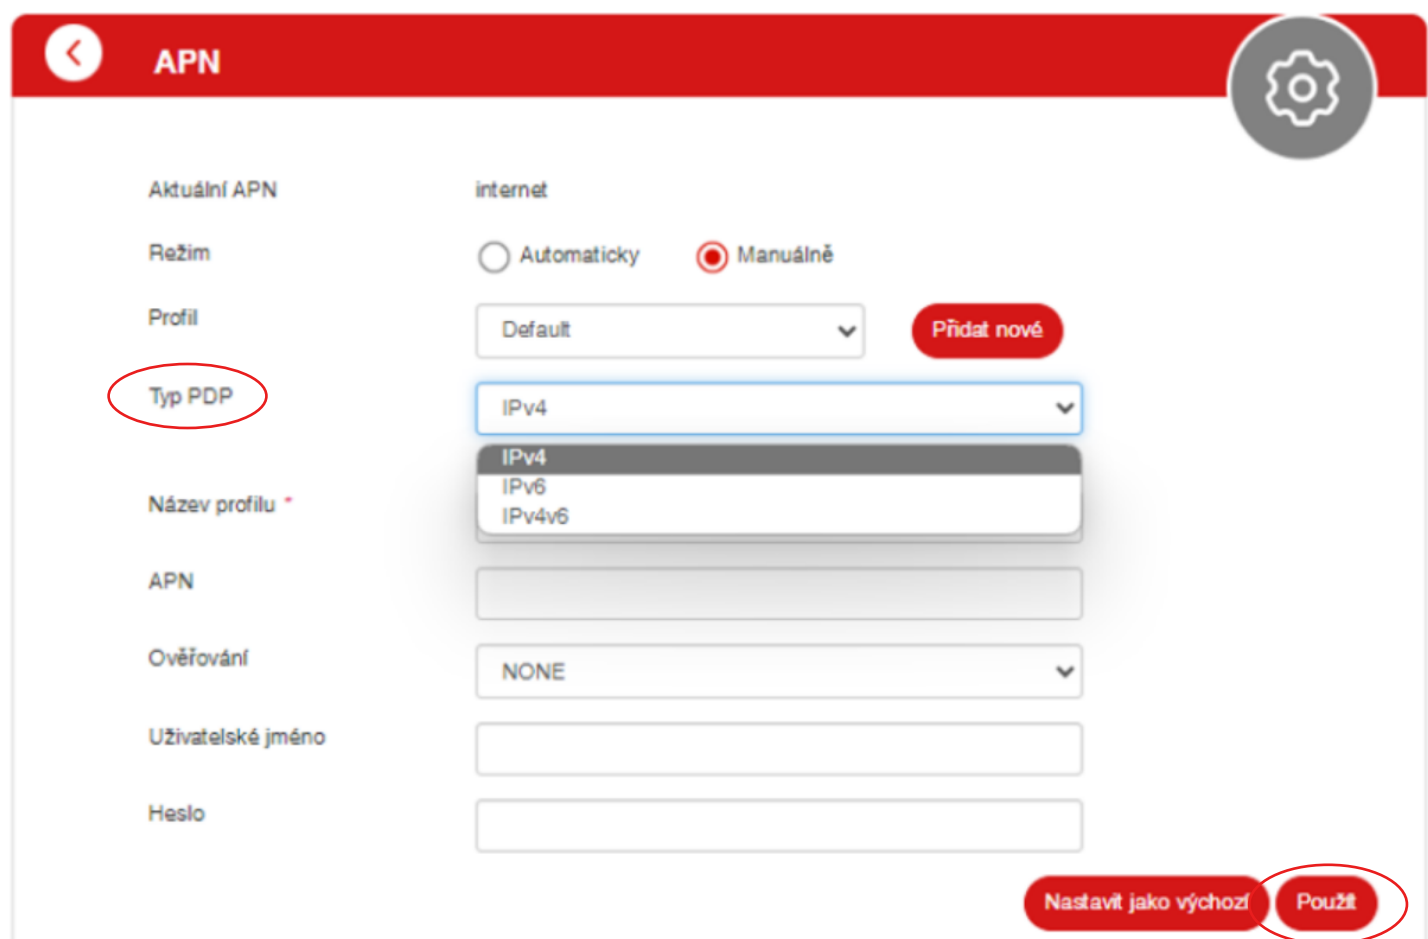

This screenshot shows the 'APN' settings screen with the 'Typ PDP' (PDP Type) dropdown menu open. The 'Manuálně' (Manual) mode is still selected. The dropdown menu for 'Typ PDP' shows three options: 'IPv4', 'IPv6', and 'IPv4v6'. The 'IPv4' option is currently selected. Below the dropdown, there are input fields for 'Název profilu' (Profile name), 'APN', 'Ověřování' (Authentication), 'Uživatelské jméno' (Username), and 'Heslo' (Password). At the bottom right, there are two red buttons: 'Nastavit jako výchozí' (Set as default) and 'Použít' (Use). The 'Použít' button is circled in red.